




## INDUSTRIAL COMPOUND FMI 50

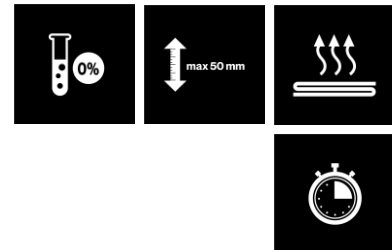

- > quick hardening
- > self-levelling
- > ready-to-use floor covering
- > abrasion-resistant



### Product description

Self-levelling, machine or manual, easy to process levelling compound or usable layer in layer thicknesses from 3 - 50 mm for indoors and outdoors. Especially suited to the production of even, high-load industrial floors. Due to its high mechanical strength, the mineral casting compound can be left as a usable end coating. If necessary, the surface can be impregnated, sealed or coated with reactive resin. Indoors and outdoors for producing even, high-load industrial floors, in shopping centres, office buildings, exhibition halls, etc.

#### Delivery format

Container	Outer packaging	Pallet
25 KG / PS	-	42 PS

#### Storage

Can be stored frost-free, cool, and dry on wooden shelves in the unopened original container for 365 days

### Processing

#### Recommended tools

Slow-rotating electric agitator, suitable mixing vessel, trowel, smoothing trowel, spatula, scraper or suitable mixing pump.

#### Mixing

Take a clean mixing vessel and add this product to water using a slow-rotating agitator (approx. 300-600 rpm) until a homogeneous and lump-free blend is obtained (mixing time approx. 4

minutes). The material is stirred or added in the mixing ratio/dosing indicated. A scale or a measuring cup must be used to determine partial quantities.

Mixing ratio: approx. 4.5 litres of water (corresponds to approx. 0.18 l/kg) per 25 kg Slump-flow Industrial FMI 50

### Processing

Pour the fresh smoothing compound onto the substrate in one work step, if possible, up to the desired layer thickness (3-50 mm) and distribute evenly. With multi-layered application, the next layer must be applied immediately after the substrate can be walked on (approx. 1-2 hours). Always prime again with longer intervals. Murexin Slump-flow Industrial FMI 50 can be pumped and is suitable for scraping. We recommend impregnation of the surface for outdoor use and/or as usable end coating. Too rapid drying of the fresh levelling compound and Slump-flow Industrial FMI 50 is to be prevented with corresponding measures.

## Technical data

Density	Fresh mortar density: ~2,100 kg/m <sup>3</sup> ; dry mortar density: ~1,300 kg/m <sup>3</sup>
pH value	~12
Colour	Cement grey
Consumption	1.7 kg/m <sup>2</sup> per mm layer thickness
Processing time	30 min.
Accessibility for the next work step	after 3 - 4 hrs depending on layer thickness
Processing temperature	+5 °C to +35 °C
Setting time	90 min.
Wear stress	XM3; also for covering areas which are often driven over by track
Labelling	C 35 / F 10 according to EN 13813
Flow spread	approx. 16 - 18 cm (d = 50 mm / h = 35 mm)

## Test certificates

### Tested in accordance with (standard, classification ...)

Geprüft lt. ÖNORM B 4710-1: Verschleißbeanspruchung XM3

## Substrate

### Suitable substrates

The substrate meets the requirements of the OVBB Guideline – Conservation and Rehabilitation of Concrete and Reinforced Concrete Structures. Furthermore, the substrate must be load-bearing and free of similar and dissimilar substances as well as substances that have a separating effect, corrosive media, such as chlorides, and must be pre-wetted for at least 12 hours before restoration until capillary saturation. Adhesive tensile strength at least 1.5 N/mm<sup>2</sup>. Compressive strength at least 25 N/mm<sup>2</sup>.

### Product and processing instructions

#### Material information:

- If processing outside the ideal temperature and/or humidity range the material properties could change markedly.
- Bring the materials to the proper temperature before processing!
- In order to maintain the product properties, do not add any foreign materials!
- Water dosing quantities or dilution information must be strictly adhered to!
- Check tinted products for colour accuracy before application!
- Colour consistency can only be guaranteed within the same batch.
- The colour formation is significantly impacted by the environmental conditions.
- Already mixed material that is beginning to harden may not be diluted further or mixed with fresh material!

#### Environmental information:

- Do not process at temperatures below +5 °C!
- The ideal temperature range for the material, substrate and air is + 15 °C to + 25 °C.
- The ideal relative humidity range is 40% to 60%.
- Increased air humidity and/or lower temperatures may prolong the drying, setting and hardening time, while lower air humidity and/or higher temperatures will speed it up.
- Ensure adequate ventilation during the drying, reaction and hardening phase; avoid draughts!
- Protect against direct sunlight, wind and weather!
- Protect adjacent components!

#### Tips:

- We recommend using a test surface first or a small area for initial, small-scale testing.
- Please heed the product data sheets of all MUREXIN products used in the process.
- Keep a genuine original container of the respective batch for later repair work.
- For heated screeds, a standard heating procedure is required before laying,
- Do not turn on the underfloor heating system during processing and hardening.

The information provided reflects average values that were obtained under laboratory conditions. Due to the use of natural raw materials, the indicated values of individual deliveries may vary slightly without impacting the product suitability.

### Safety instructions

Please refer to safety data sheet for product-specific information with regard to composition, handling, cleaning, corresponding actions and disposal.

#### Limiting and monitoring exposure

##### Personal protective equipment:

##### General protection and hygiene measures:

- Keep away from foodstuffs, beverages and feedstuffs.
- Take off contaminated, impregnated clothing immediately.
- Wash your hands before taking breaks and when finishing work.

##### Breathing protection:

- Filter P2.
- Wear breathing protection in case of inadequate ventilation.

##### Hand protection:

- Protective gloves.
- The glove material must be impermeable and resistant to the product/substance/preparation.

##### Glove material

- Nitrile rubber
- Use gloves made from stable materials (e.g. nitrile).

##### Penetration time of the glove material

- The precise penetration time is to be found out from the protective glove manufacturer and complied with.

Eye protection: Protective goggles recommended when decanting.

Body protection: protective clothing.

This leaflet is based on extensive experience, is intended to convey the best of our knowledge, is not legally binding and does neither constitute a contractual legal relationship nor a subsidiary obligation resulting from the bill of sale. The quality of our materials is guaranteed within the framework of our general terms and conditions. Our products may be used by professionals and/or experienced and accordingly technically skilled persons only. Users are not released from inquiring in case of uncertainties or from rendering professional workmanship. We recommend using a test surface first or a small area for initial, small-scale testing. Naturally, it is not possible to describe or foresee all possible current and future uses and peculiarities. Information that is assumed to be familiar to experts has been omitted.

Please observe the current, technical, national and European standards, guidelines and data sheets regarding materials, substrates and the subsequent construction. Please contact us if you have any reservations or doubt.

This version is rendered invalid if a new version is released. The most recent data sheets, safety data sheets and the terms and conditions are available online at [www.murexin.com](http://www.murexin.com).